





null | furniture

ASSEMBLY INSTRUCTION

ITEM NO:3022-22
CHAIRSIDE CABINET

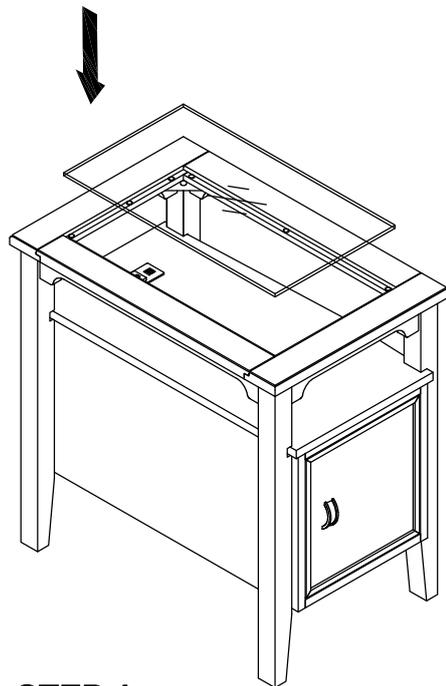

STEP 1

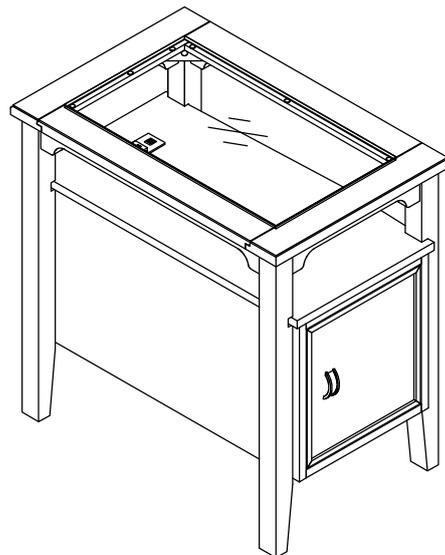

**DO NOT TIGHTEN SCREWS
UNTIL COMPLETELY ASSEMBLED**