





null | furniture

# ASSEMBLY INSTRUCTION

ITEM NO:8821-22  
CHAIRSIDE CABINET

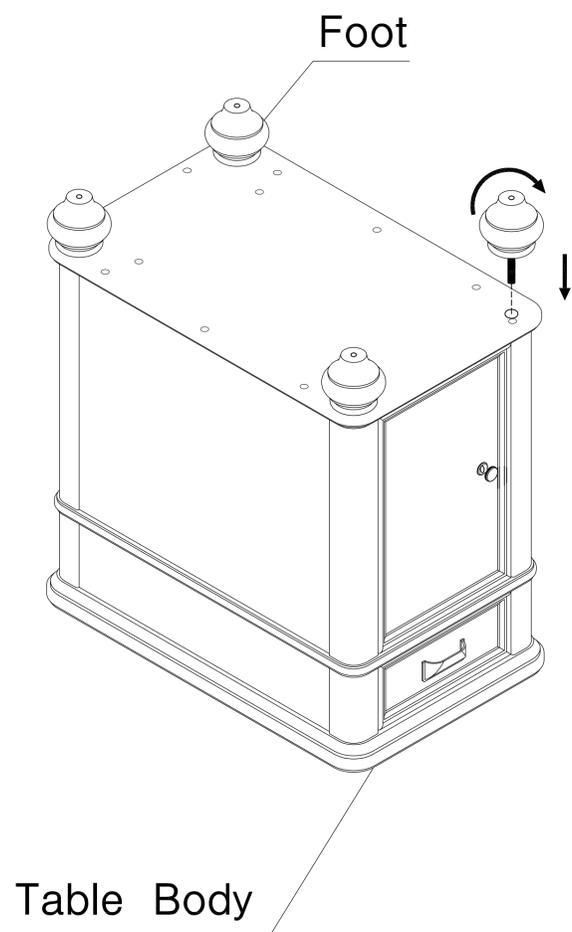

STEP 1

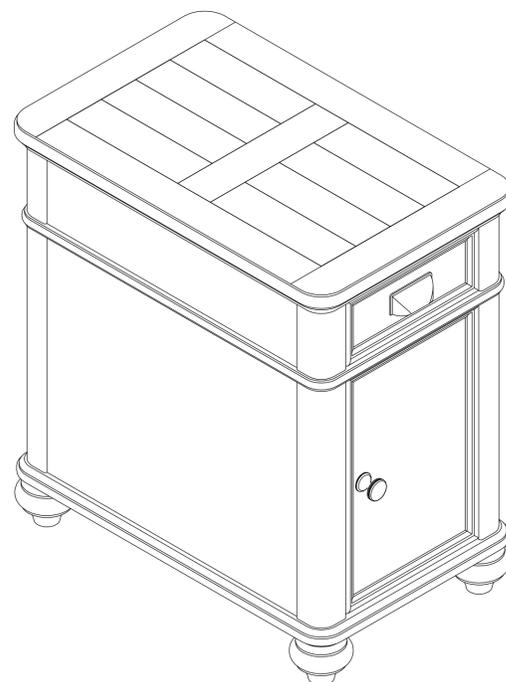

DO NOT TIGHTEN SCREWS  
UNTIL COMPLETELY ASSEMBLED