




null | furniture


# ASSEMBLY INSTRUCTION

ITEM NO:6618-22  
CHAIRSIDE CHARGING CABINET


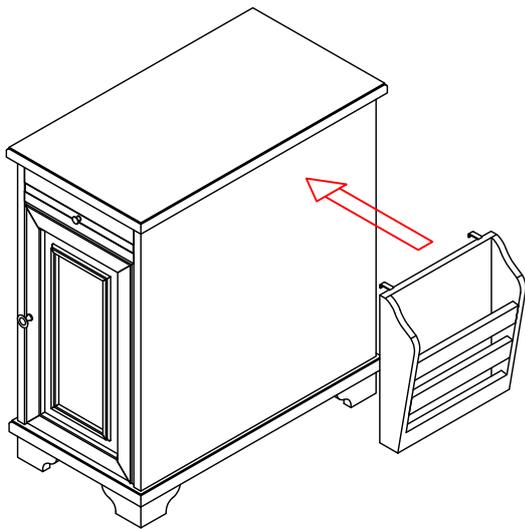


STEP 1

OR

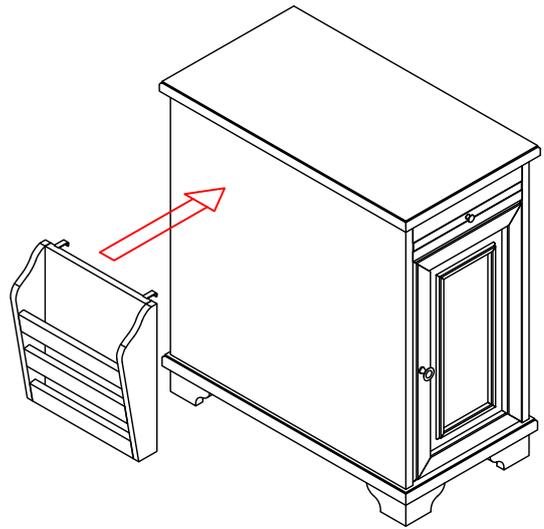

STEP 1

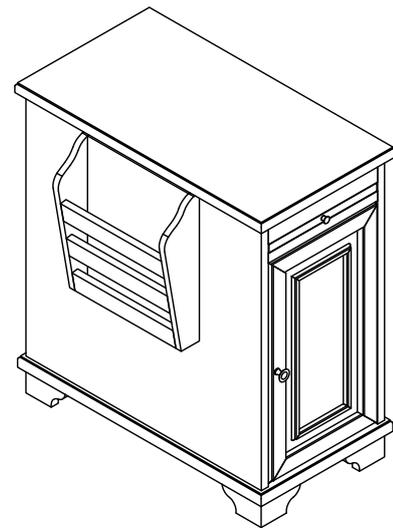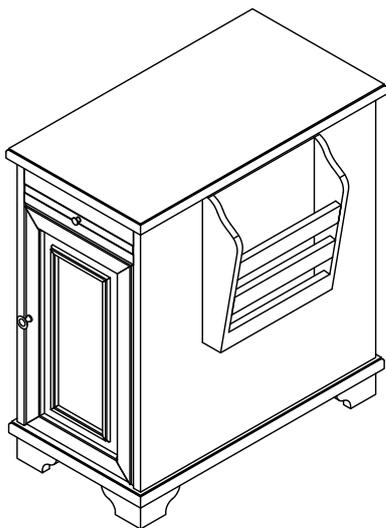

DO NOT TIGHTEN SCREWS  
UNTIL COMPLETELY ASSEMBLED