





null | furniture

ASSEMBLY INSTRUCTION


ITEM NO:6618-70
CHARGING WEDGE STEP TABLE

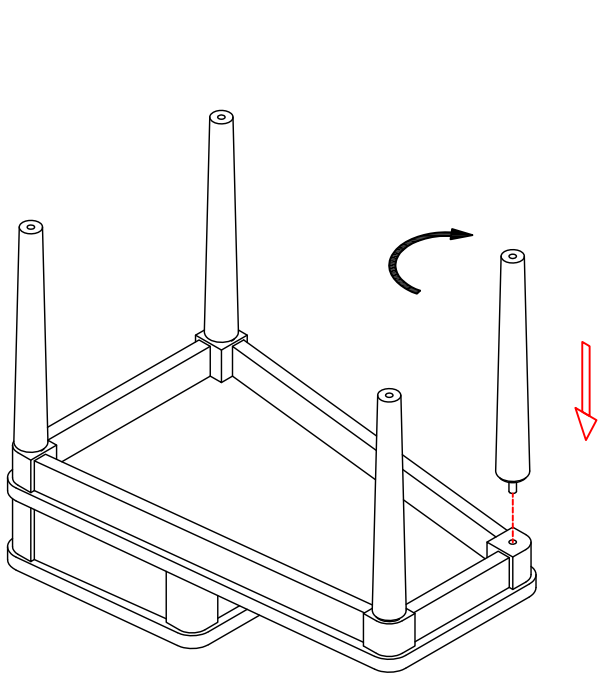

STEP 1

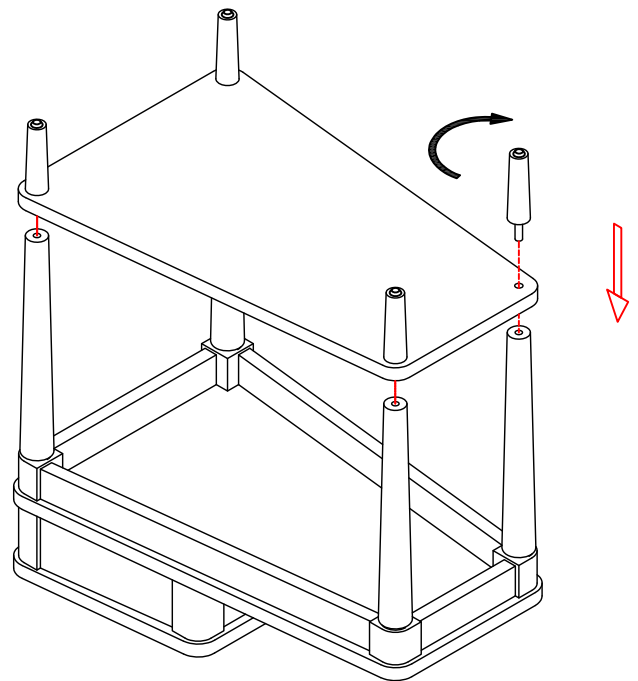

STEP 2

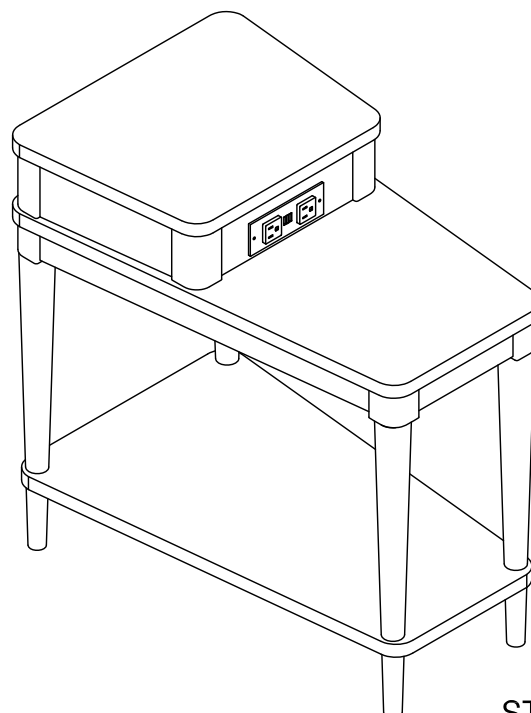

STEP 3

DO NOT TIGHTEN SCREWS
UNTIL COMPLETELY ASSEMBLED