

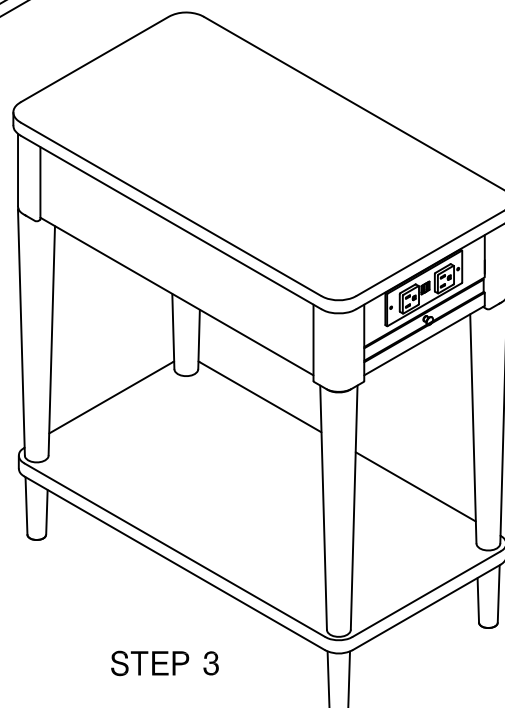


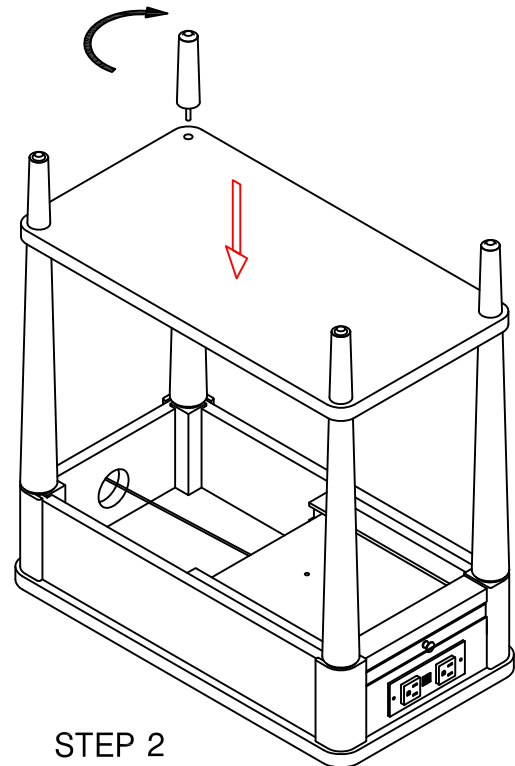

null | furniture

## ASSEMBLY INSTRUCTION

ITEM NO:6618-06  
CHARGING CHAIRSIDE

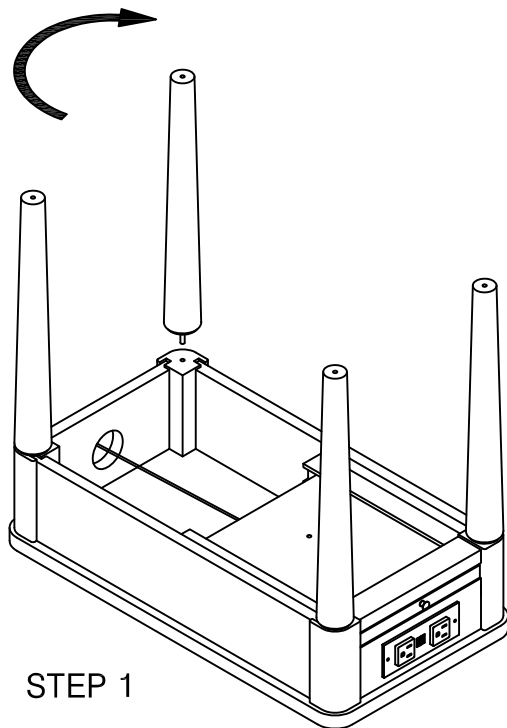

DO NOT TIGHTEN SCREWS  
UNTIL COMPLETELY ASSEMBLED